



FS1280 SERIES - TITAN

INSTRUCTION MANUAL

Manufacturers of safes since 1799


PHOENIX SAFE COMPANY WHERE PEACE OF MIND IS GUARANTEED

1. BATTERIES


Prior to using safe, load 4pcs of 1.5V AA Alkaline batteries.

* Non-alkaline and rechargeable batteries are not recommendable.


HOW TO INSTALL BATTERIES

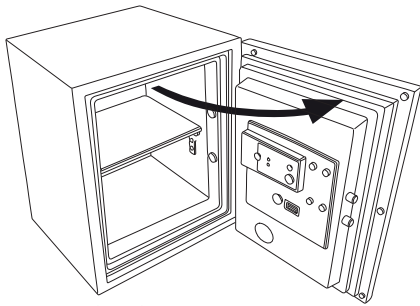

1. Open the door.
(The battery cover is on door back.)

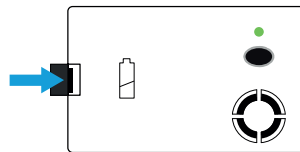

2. Press the end of the battery cover to the right, then pull it forward to remove it.)

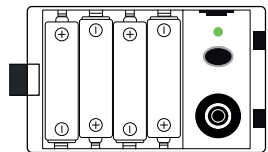

3. Load 4pcs of 1.5V AA Alkaline batteries as shown above.
(LED flickers, Bi Bi Bi sound, good on FND)

* Replace the batteries in the following cases (replace all four batteries at the same time.)

- If LobAtt appears on FND.
- If you hear a 'Bi-ric' sound when tapping the numbers.
- If the door does not open or a 'Happy Birthday' melody plays even after entering the correct password according to 2. Opening


* Battery life span: 1 year (Average openings 3 times a day)

* Even if batteries are replaced, the registered code is not erased.


* **Note : If the door is not opened in spite of correct user code, please check batteries before calling for service. The exhausted batteries must be replaced with new ones immediately because of a leakage expected.**

HOW TO OPEN THE SAFE WHEN THE BATTERY IS LOW

If the battery is low, you can open the safe by connecting an external power source.

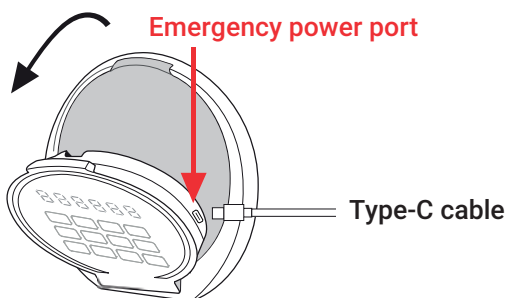


1. Open the keypad on the lock as shown above and connect a Type-C cable to the emergency power port. (Power can be supplied using a charger, mobile phone, etc.)

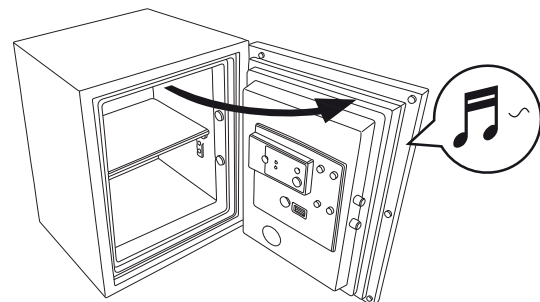

2. Once the electronic lock is powered on, follow the instructions in 2. Opening to unlock the door and replace the batteries.
(Keep the cable connected while opening the door.)

2. OPENING

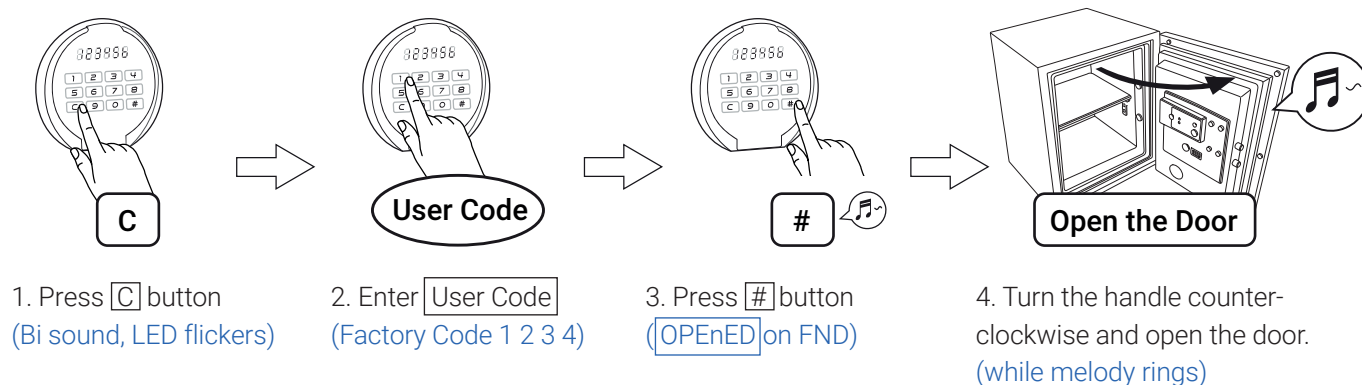

*** NOTE : If a wrong code is tried, bi-bi-bi sound and [Error] on FND.**

* Paralysis: If a wrong code is entered 5 consecutive times, the lock will be paralyzed for 5 minutes.

1. No response when pressing the button.

2. The remaining Paralysis Time is indicated on FND as Min-Sec.

If the remaining time is 4 minutes and 29 seconds, [4_29] indicated on FND.

3. After 5 minutes, paralysis is released.

* Scramble Numbers: When opening a safe, scramble numbers can be put

before and/or after the real code to avoid peeps. User code should be touched consecutively.
32 numbers are acceptable including the real code.

(Ex) In case of user code '1 2 3 4', touch 'xxx1234', '1234xxx', 'o r ' xxx1234xxx'.

3. SETTING USER CODE

It is advisable to set a new personal code with the door open and test the new code before closing the door.

- **Step 1** Press '#' button
- **Step 2** Enter the Present Code.
- **Step 3** Press '#' button.
- **Step 4** Enter New 4~ 16 digit Code.
- **Step 5** Press '#' button.

For example:


If the present code is 1 2 3 4 5 6 and a new four digit code is decided as 4 2 4 2 press buttons as below.

#123456#4242#

EnTErd will be indicated in the display and a short 3 second tone will sound to confirm the change to 4 2 4 2.



4. LOCKING

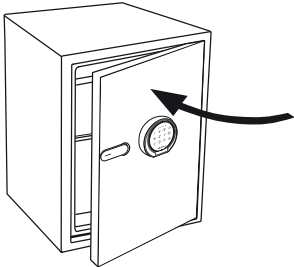


Close the door and turn the handle clockwise.

*** CAUTION:**

1. Do not close the door or slam it too hard when the active bolts are extended.
2. If the door does not lock after closing, check if any contents inside are obstructing the locking mechanism.

5. SOUND HIDE


► Set:

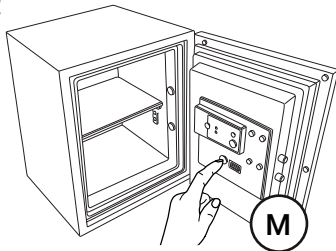

1. Press **[M]** button on door back
(Bi sound)



2. Press **[7]** button

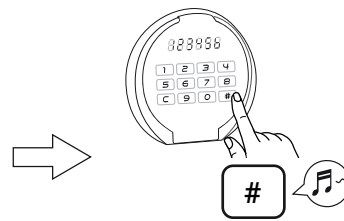


3. Press **[#]** button
(**[HiDe]** on FND)

► Unset: **[M]** → **[#]** → **[7]** **[#]** (musical note icon) (**[CLEAR]** on FND)

6. ALARM SETTING

Once alarm system is affected by shock or tilt, it makes horn immediately.

► Set/Unset: Press **[BUTTON]** (On / Off)
(LED turns on/pff, 15 seconds required)*

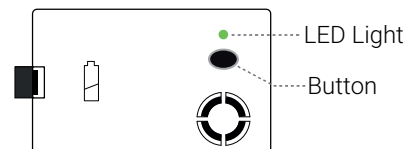

*When replacing the batteries, refer to **1.Batteries**


*** CAUTION:**

1. If the alarm has been sounding for more than 30 minutes, replace the batteries with new ones.
2. If the battery level is insufficient, the alarm may not function properly or may produce a weak sound.
3. If the operation indicator does not light up brightly when pressing the operation button, replace the batteries.

7. MULTI-USER MODE

- Two users can independently use the safe with each other's own code.
- The 1st code is already set.
- Multi-user mode and Dual-user mode cannot be used simultaneously.

► Set:

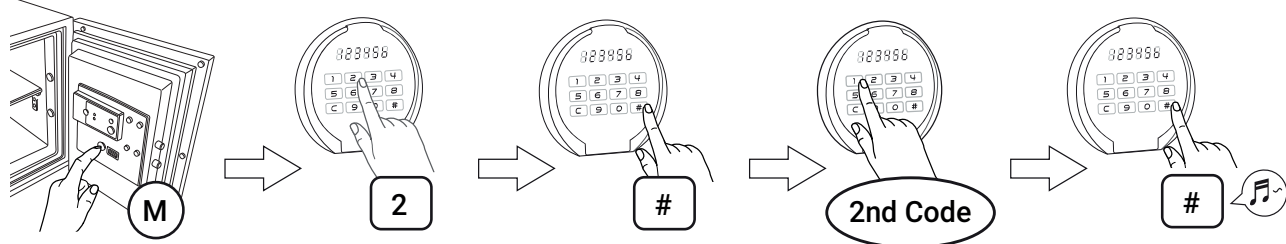

1. Press **M** button on door back (Bi sound)
2. Press **2** button
3. Press **#** button
4. Enter 2nd Code (4~16 digits)
5. Press **#** button (good on FND)

* CAUTION:


1. 2nd user code must be different from 1st code.
2. Prior to closing door, confirm as shown in **2. Opening** if **2nd code** registered exactly.
3. 2nd code can be changed in the same way as **7.Multi-users mode►Set**.
4. For setting or changing 1st code, please follow the instructions in **3.Setting User Code**.

► Unset: **M** ⇒ **#** ⇒ **2** ⇒ **#** (CLEAR on FND)

* CAUTION:

1. If multi-users mode unsets, 2nd code is removed automatically.
2. 1st code cannot be removed.

► Open:

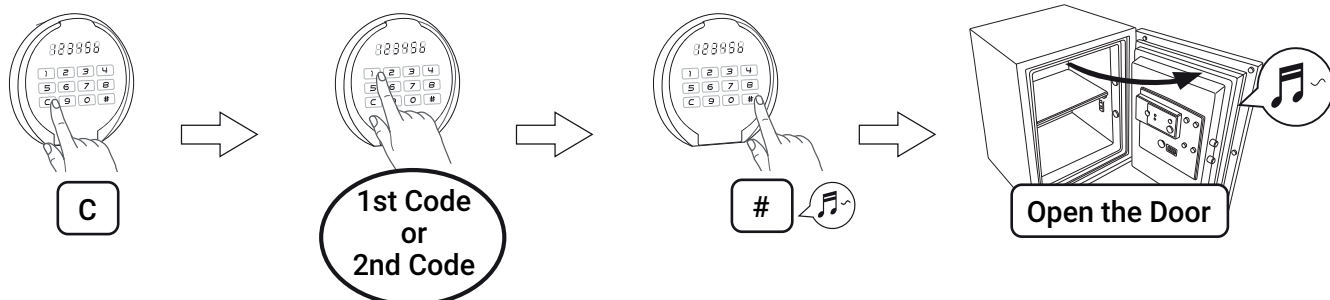


1. Press **C** button (Bi sound, LED flickers)
2. Enter 1st Code or 2nd Code
3. Press **#** button (OPENed on FND)
4. Turn the knob clockwise and Open the door (while melody rings)

8. DUAL-USER MODE

- When opening, two different codes should be entered consecutively.
- The 1st code is already set.
- Multi-user mode and Dual-user mode cannot be used simultaneously.

► Set:

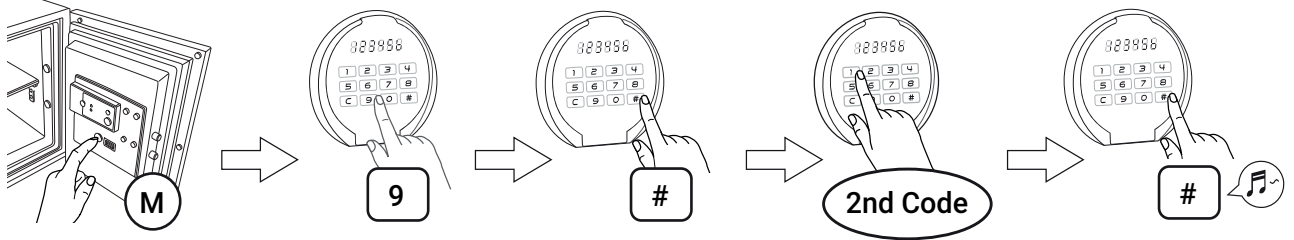

1. Press **[M]** button on door back (Bi sound)
2. Press **[9]** button
3. Press **[#]** button
4. Enter 2nd Code (4~16 digits)
5. Press **[#]** button (**[good]** on FND)

* CAUTION:


1. 2nd user code must be different from 1st code.
2. Prior to closing door, confirm as shown in **[2. Opening]** if **[New code]** registered exactly.
3. 2nd code can be changed in the same way as **[8. Dual-code mode ► Set]**.
4. For setting or changing 1st code, please do as shown in **[3. Setting User Code]**.

► Unset: **[M]** ⇒ **[#]** ⇒ **[9]** ⇒ **[#]** (musical note icon) (**[CLEAR]** on FND)

* CAUTION:

1. If multi-users mode unsets, 2nd code is removed automatically.
2. 1st code cannot be removed.

► Open:

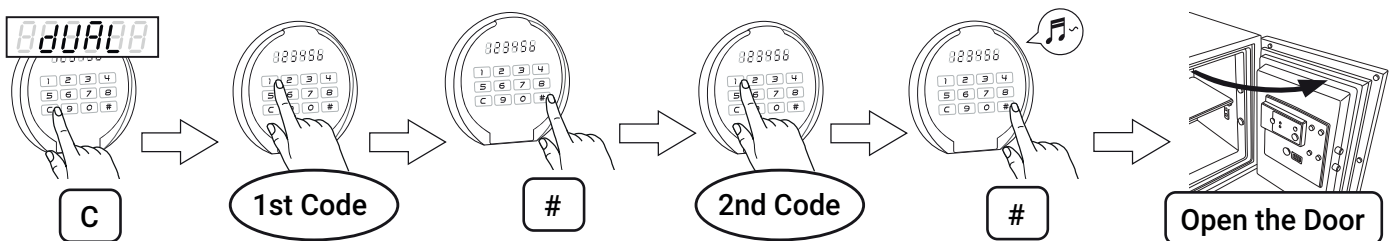

1. Press **[C]** button (Bi sound, **[dUAL]** on FND)
2. Enter **[1st Code]**
3. Press **[#]** button
4. Enter **[2nd Code]**
5. Press **[#]** button (**[OPEnEd]** on FND)
6. Turn the knob clockwise and Open the door (while melody rings)